
 
Chassis Quick Reference




Front Panel Controls and Indicators


- A. HDD Tray Activity LED B. USB 2.0 Port
- C. System Reset Button
- D. Alarm Mute Button
- E. System HDD Activity LED
- Power LED
- G. Failure LED
- H. LAN 1 & LAN2 LED I. Power Switch

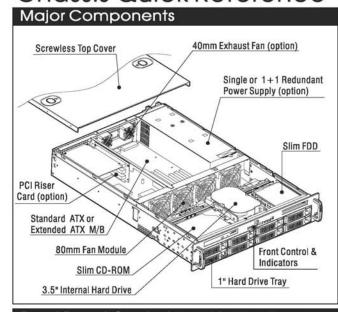




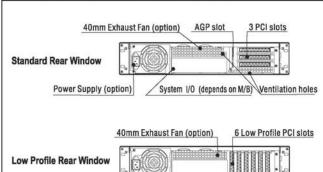

Top Cover Opening

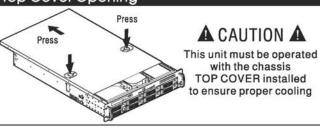



Installing Hard Drive

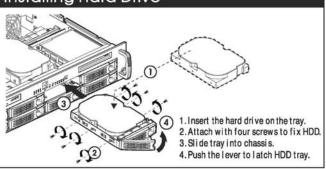

Installing Exhaust Fan, Power Supply & Riser Card

 - 1. Attach with seven screws for
- power supply
 2. Attach with eight screws for

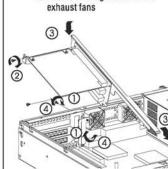




- 1. Release one screw and remove Z plate
- 2. Attach with two screws to fix riser card
- 3. Insert this end into notch.
- 4. Attach with Z plate and origional screw to fix

Installing Slim CD-ROM


- 1. Release screw then move 2. Attach with two back and take out bracket
 - screws for adapter
- 3. Attach with four screws to fit slim CD-ROM on bracket

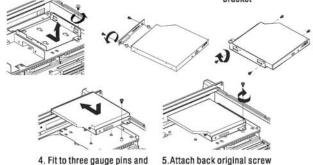

Installing Internal HDD & Slim FDD

move forward until fasten

 - 1. Release screw then move back and
- take out bracket
- 3. Fit to two gauge pins and move forward until fasten
- 2. Attach with four screws to fit HDD/FDD 4. Attach back original screw













Installing Backplane Assembly

